


Timberline

Cabinet Legs Installation Guide

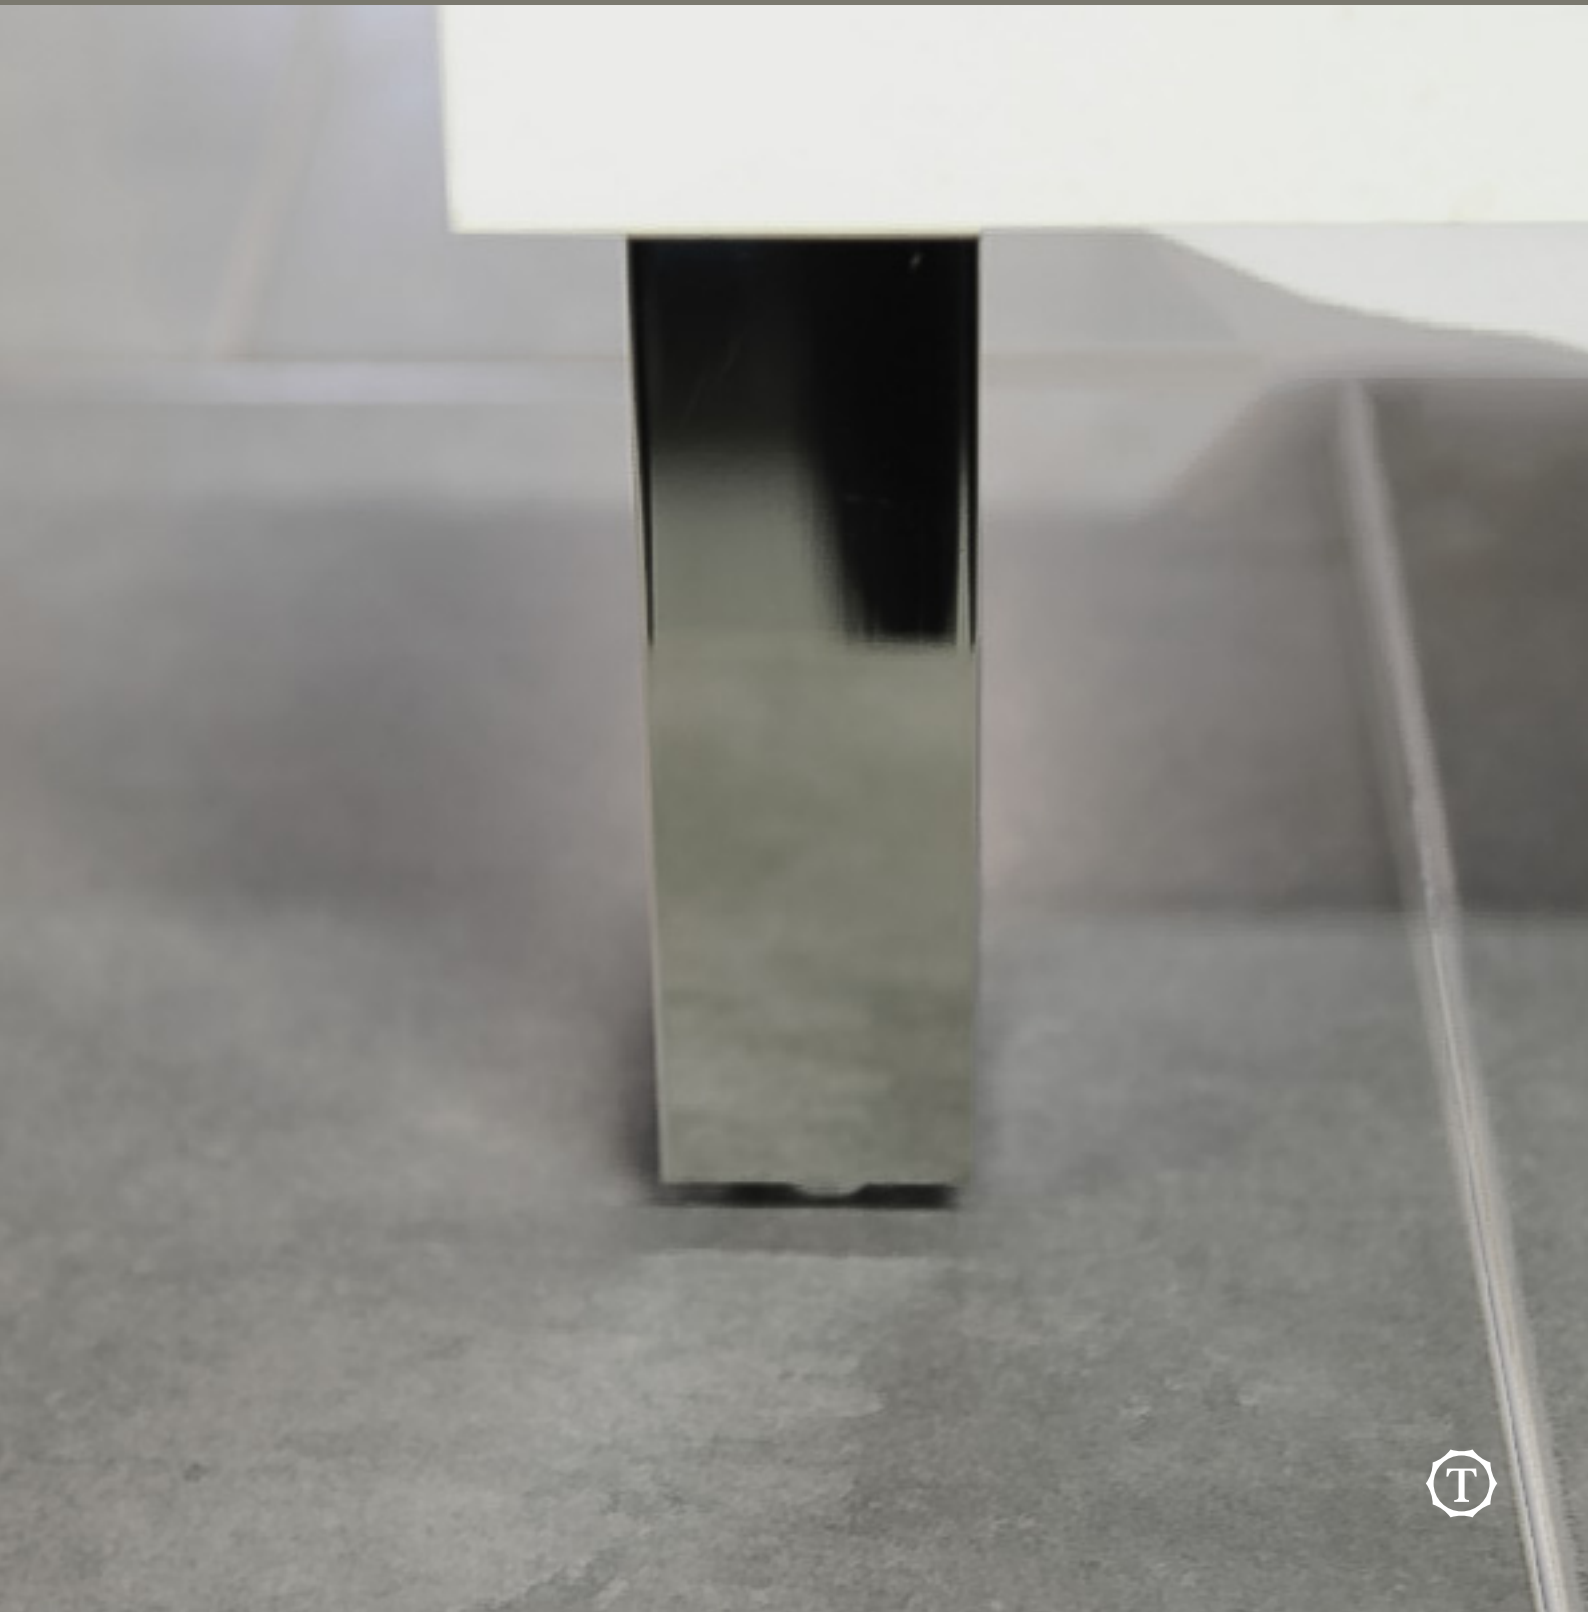


Timberline

CABINET LEG INSTALLATION INSTRUCTIONS


1. Print template at actual size.
2. Cut and place the drilling template in the corner of the cabinet.
3. Mark out the holes using a marker.
4. Pre-drill holes.
5. Attach leg by using the screws provided.
6. Repeat steps 2-5 for remaining legs.

Note: Cabinet must be mounted to wall. Legs are decorative, not functional.

ROUND LEG TEMPLATE

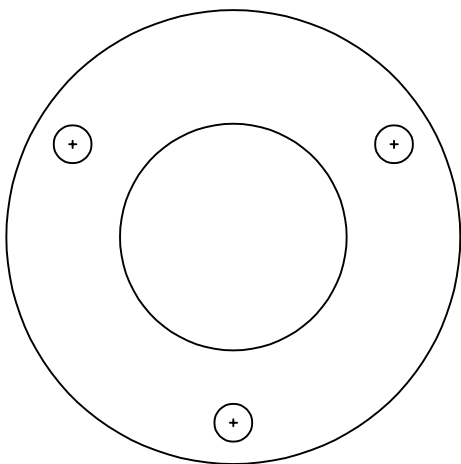

SQUARE LEG TEMPLATE

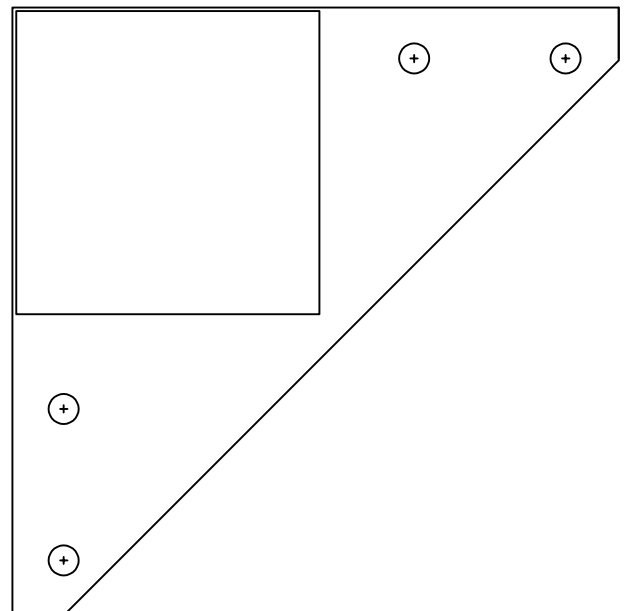

Round

Legs can be adjusted within 150mm – 166mm height.



Square

Legs can be adjusted within 150mm – 166mm height.


Sutherland House

CABINET LEG INSTALLATION INSTRUCTIONS


1. Print template at actual size.
2. Cut and place the drilling template in the corner of the cabinet.
3. Mark out the holes using a marker.
4. Pre-drill holes.
5. Attach leg by using the screws provided.
6. Repeat steps 2-5 for remaining legs.

Note: Cabinet must be mounted to wall. Legs are decorative, not functional.

STRAIGHT LEG TEMPLATE

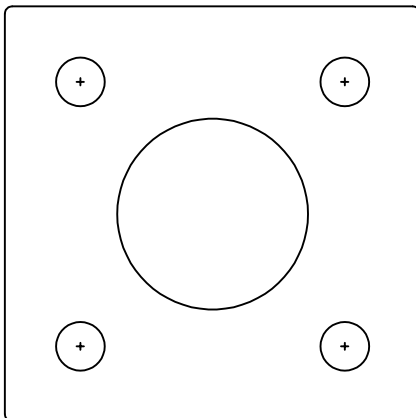

ANGLED LEG TEMPLATE

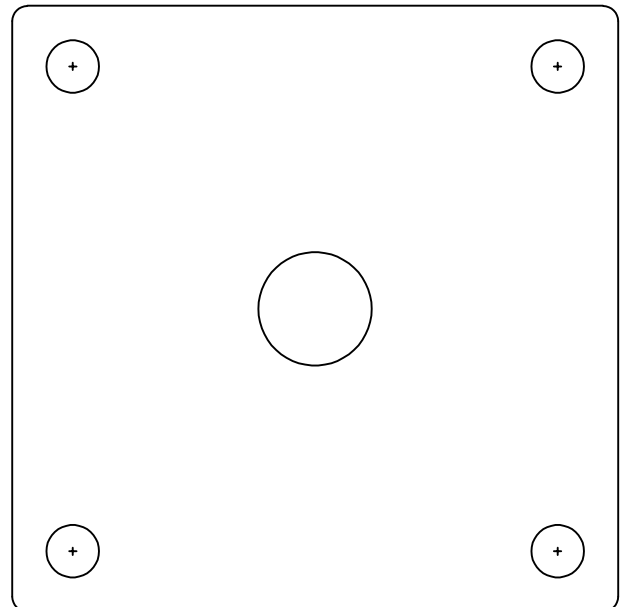

Straight



Angled