

# Milan Vanity Installation Instructions



# Milan Vanity


## INSTALLATION GUIDE

1. Studs / noggins must be provided for secure mounting. Wall plugs or toggles through tiles/wall sheeting is not suitable. Measure the locations of the brackets so that there is a bracket on each side of the vanity. Vanities 1200 and over will also require a third bracket fixed to the upright in the middle of the cabinet.
2. Place the rectangular mounting plates behind the main brackets and fasten both to the wall through the mounting holes provided – don't fully tighten screws. Use screws/fixings suited to the wall construction.
3. Use the small hex head grub screws to adjust the brackets until level and then fully tighten main screws into the wall. Slide the cabinet over the brackets.
4. Attach brackets to sides of the cabinet with short timber screws through the holes provided in the sides of the brackets.



**NOTE: It is the responsibility of the installer:**

1. To ensure that the wall is of a suitable quality to hold the shelf fixing in place.
2. To use the proper hardware fittings according to the construction of the wall.

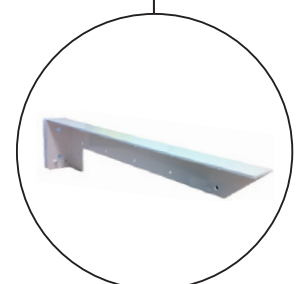

Bracket is to be mounted inside the cabinet.