

# Cabinet Legs Installation Guide





# Timberline

## CABINET LEG INSTALLATION INSTRUCTIONS

1. Print template at actual size.
2. Cut and place the drilling template in the corner of the cabinet.
3. Mark out the holes using a marker.
4. Pre-drill holes.
5. Attach leg by using the screws provided.
6. Repeat steps 2-5 for remaining legs.

**Note:** Cabinet must be mounted to wall. Legs are decorative, not functional.


### ROUND LEG TEMPLATE

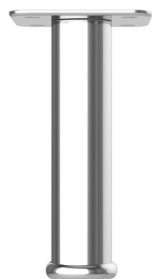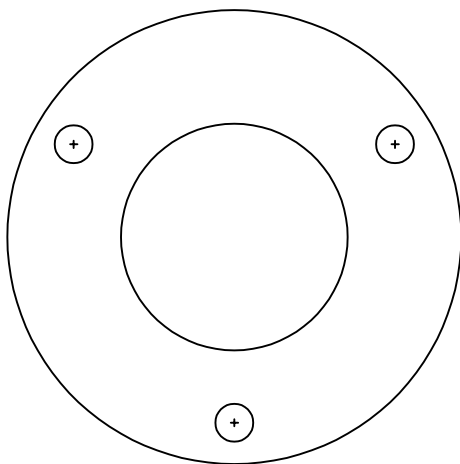

Round

Legs can be adjusted within 150mm – 166mm height.

### SQUARE LEG TEMPLATE

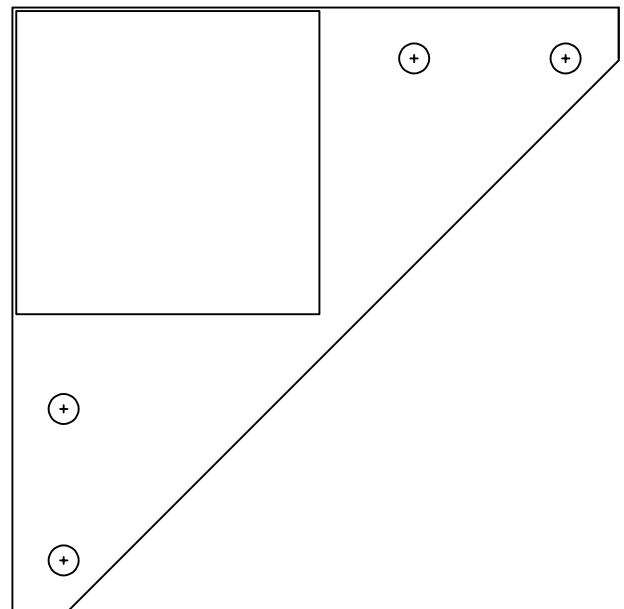

Square

Legs can be adjusted within 150mm – 166mm height.


# Timberline

## CABINET LEG INSTALLATION INSTRUCTIONS\*

1. Print template at actual size.
2. Cut and place the drilling template in the corner of the cabinet.
3. Mark out the holes using a marker.
4. Pre-drill holes.
5. Attach leg by using the screws provided.
6. Repeat steps 2-5 for remaining legs.


**Note:** Cabinet must be mounted to wall. Legs are decorative, not functional.

### ARROW LEG TEMPLATE

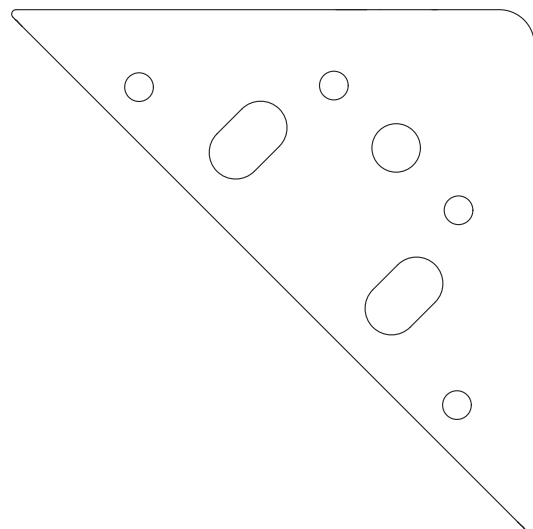

Arrow

### EDGE LEG TEMPLATE

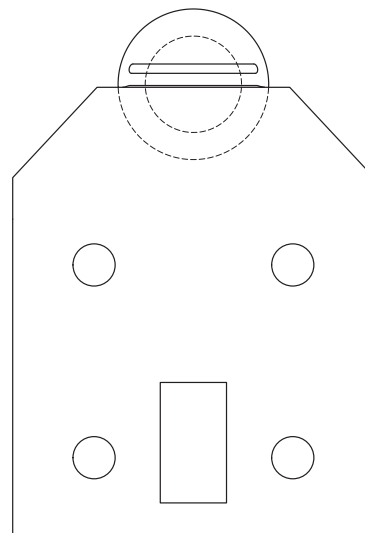

Edge

# Timberline


---

## CABINET LEG INSTALLATION INSTRUCTIONS


1. Print template at actual size.
2. Cut and place the drilling template in the corner of the cabinet.
3. Mark out the holes using a marker.
4. Pre-drill holes.
5. Attach leg by using the screws provided.
6. Repeat steps 2-5 for remaining legs.

**Note:** Cabinet must be mounted to wall. Legs are decorative, not functional.

### STRAIGHT LEG TEMPLATE

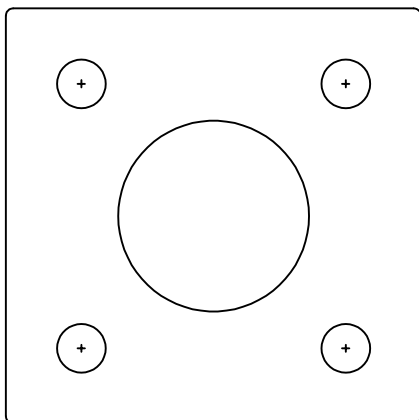

### ANGLED LEG TEMPLATE

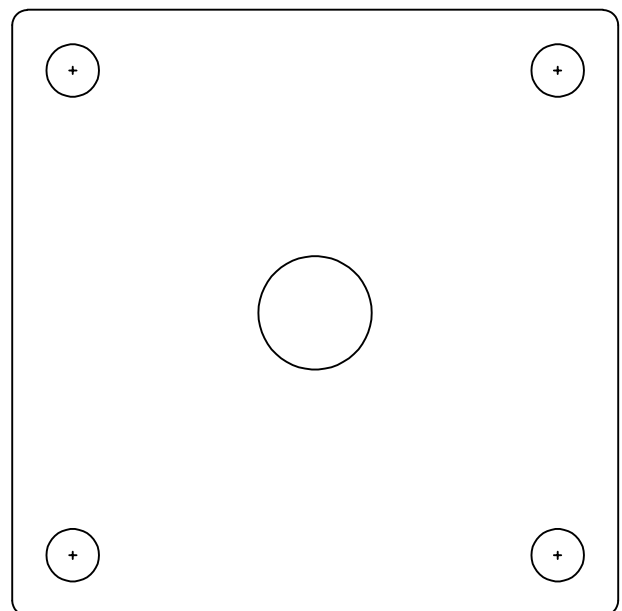

Straight



Angled